

Artistic Images Decorative Wall Paneling

Infinity Edge & Flush Edge Wall Return Installation Instructions

Step 1. Determine where to hang your Artistic Images Decorative Wall Paneling, and using one of the included drywall screws, screw into the middle hole of the provided cleat hanger. If your print is larger than a 40" x 60", we strongly suggest using drywall anchors to support the added weight of the print. Drywall anchors (Not Provided) can be purchased at any hardware store or online.



Step 2. Using the included mini bubble level, place the level on top of the cleat like the image demonstration below. Adjust the cleat to ensure the bar is level.



Step 3. Screw in the left and right side screws to secure the hanging cleat. You can use a drill to make pilot holes for the 2 remaining screws to make sure they do not shift when fastening.



Step 4. Slide to secure your Artistic Images Decorative Wall Paneling onto the cleat hanger, and adjust left or right to center your print to the desired location.